



## ACCOUNT OPTION

### PD 5500, ASME VIII DIV.1&2, EN 13445 and Stoomwezen Codes

Set-up charge 200.00 which includes:

- Cost of current version of software (at time of setting up account)
- In-built, fully integrated Technical Reference Manuals for PD 5500, ASME VIII Div.1, ASME VIII Div.2, EN 13445 & Stoomwezen
- Verification Manuals for PD 5500, ASME VIII Div.1, ASME VIII Div.2, EN 13445 & Stoomwezen

Advance rental - 250.00, to be used within 1 year of purchase.

Finglow require payment of the Set-up charge prior to the media being despatched.

***Daily charges are debited at the time of use, therefore we require that clients using the account option facility to keep a minimum credit balance of 50.00.***

When updates are released, Account Option clients will be offered the updated media at cost price. This will be charged at 80.00.

### Account Option Fees - based on one day's usage or part thereof ①

<b>Utility Modules</b>	<b>FEE</b>
Basic Menu & Control Program incl. Data Sheet /Manual Calcs Module*	10.00
Material Database	FOC
Design Report Formatter	FOC
Engineering Formula Processor Editor	10.00

*\*With the exception of the Basic Menu & Control Program, all other modules are optional.*

<b>Engineering Modules</b>	<b>FEE per code</b>
Shells - Internal Pressure	3.00
Shells - External Pressure	3.00
Nozzles & Openings	3.00
Saddle & Ring Supports	3.00
Local Loads on Cylinders	3.00
Local Loads on Formed Heads	3.00
Bolted Flanged Connections	3.00
Bolted or Welded Flat Heads	3.00
Fixed Tubesheets	3.00
U Tube & Floating Tubesheets	3.00
Floating Head Covers & Rings	3.00
External Loads on Vertical Vessels	6.00
External Loads on Horizontal Vessels	6.00
Cyclic Loading	6.00

① Daily fees include technical support by phone or e-mail while system is in use.

# Finglow

## ACCOUNT OPTION (DAILY RENTAL)

### HOW IT WORKS

#### Step One

Finglow will issue an invoice for the Set up Charge and Advance Rental (450.00). On receipt of payment, Finglow will issue software media.

#### Step Two

The Account Option User then installs the software. At this stage the software is in demonstration mode only.

#### Step Three

Whenever the Account Option User wishes to access the software, he simply e-mails to Finglow the software installation code and a list of the engineering modules required, using the form provided. Finglow will issue by return the security keys necessary to enable access to the requested modules.

*Unless otherwise requested the security codes are valid until the following day.*

#### Step Four

The keys will automatically expire on the date specified and the software will return to demonstration mode.

The Account Option software will then remain dormant until further use is required. Users then follow the procedure from Step Three again.

A quarterly Statement will be issued giving details of Charges relating to the usage and configurations.

--- \*\*\* ---